

# Strap Tool Holder Installation

(KECO Premium L2E Carts)



The following instructions are to be used for installation of the KECO strap tool holders to equip your Premium L2E GPR Collision System with the K-Power & K-Power Jr. Lateral Tension Tools, along with the Kwik-Stick Vacuum Power Leverage Bar.

This install is for:

- Premium L2E Systems without a K-Locker or;
- Upgrades from an L2E to the Premium L2E System or;
- Upgrades from legacy Level 2 to the Premium L2E System



Scan the code for installation video


Hardware:

- (3) Strap Tool Holders
- (6) Plastic spacers
- (6) xxxx-xx Countersunk Machine Screws
- (6) xxxx-xx nuts

Instructions:

## Tool Holders

1. Tool holders to be installed on the left-side, when facing the collision cart.
2. If your cart has the handles installed, the first step will be to remove them and set them aside.
3. Locate/identify holes where tool holders will be installed per Figure 1. on the back of this sheet. Locations are easily identified by counting columns and rows of holes.
4. Install holders with strap lever to the right (towards the front of the cart).
5. Use the (2) holes on the far-left end of the tool holder.
6. Place screw through the tool holder.
7. Add a plastic spacer between the tool holder and cart.
8. Push exposed end of the screw through the panel hole.
9. Add a nut to the back side of the panel (inside the cart)
10. Tighten with Phillips head screwdriver while holding the nut on the backside.
11. It's recommended to leave the first screw loose to allow room for spacer on the second screw.
12. Repeat for each tool holder.

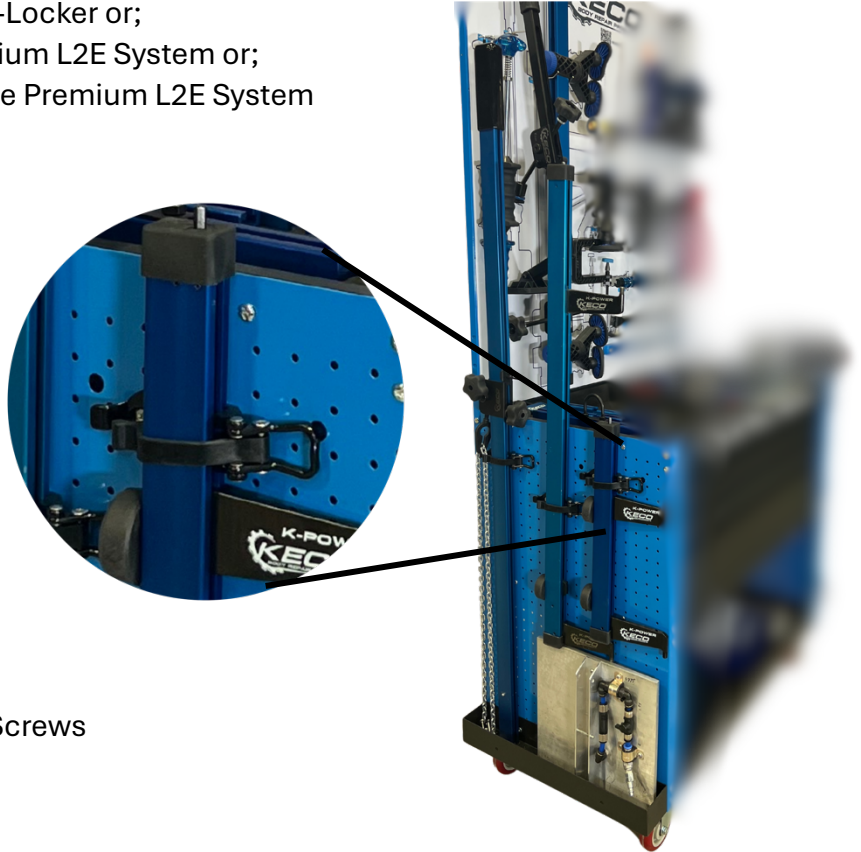

# Strap Tool Holder Installation

(KECO Premium L2E Carts)



## Bottom Pan

13. Remove the (2) middle/lower screws near the bottom of the cart.
14. Place the black tool tray with GPR+ logo in.
15. Use a Phillips screw driver with long enough shaft to reach through the outer hole and engage screws and secure the bottom pan. This will allow the Kwik-Stick to rest, along with the base of the Vacuum Kwik-Stick.

Bottom Pan

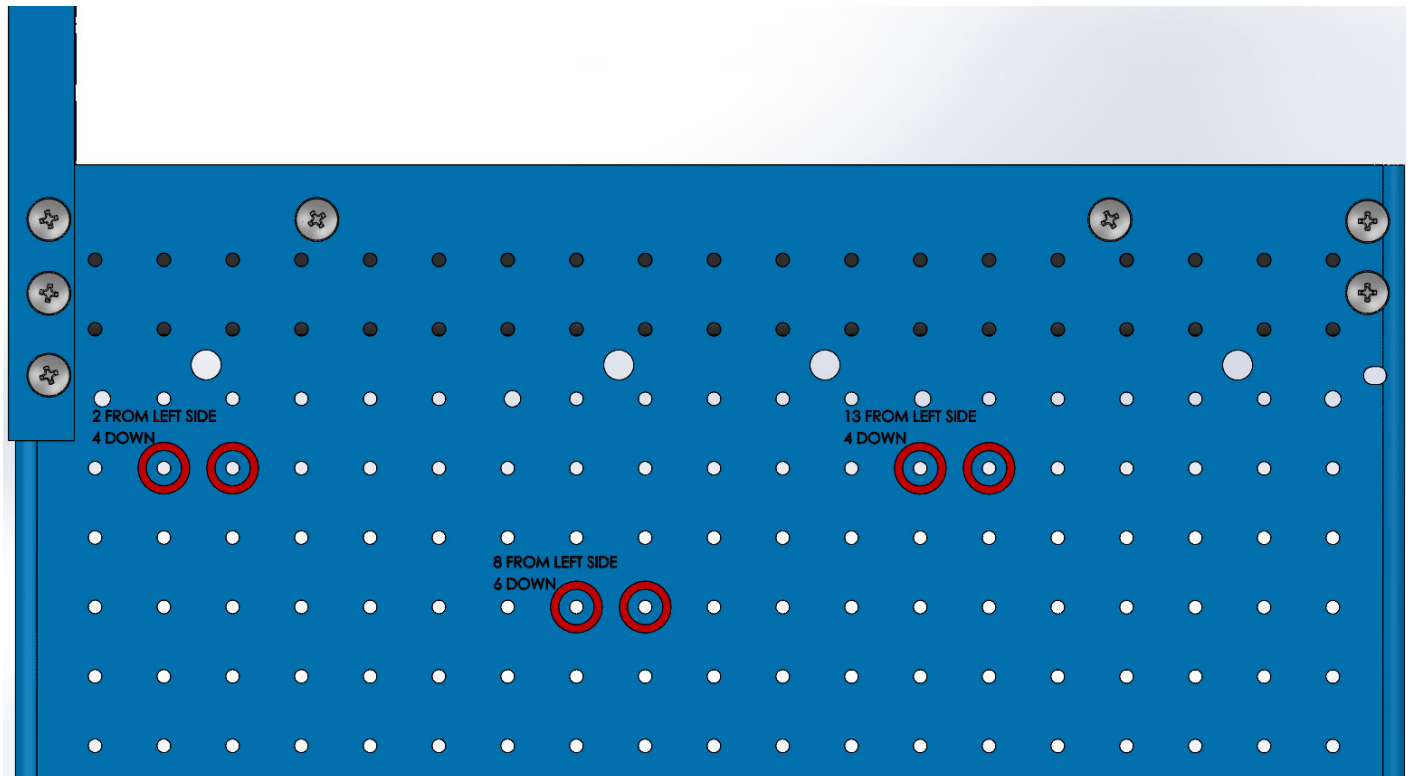
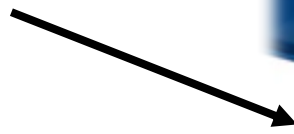


Figure 1.

Questions?

Call us at 888.532.6822 or e-mail [help@keco.com](mailto:help@keco.com)